Program Remote to Opener

Standard Drive 650, Legacy 850, Odyssey 1000, Destiny 1200, Destiny 1500
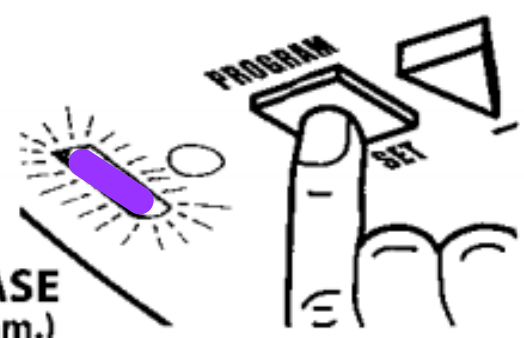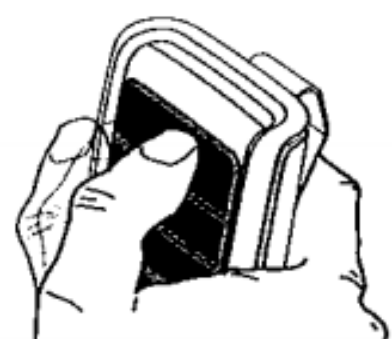
1) PRESS **PROGRAM/SET** and HOLD 5 seconds

SEE BOTH Blue LEDs come ON

2) RELEASE
SEE round
Blue LED
come ON

3) PRESS **PROGRAM/SET** and RELEASE

SEE long Purple LED flashing

4) PRESS remote and RELEASE
(the button you want to program.)

SEE long Purple LED come steady ON

5) PRESS and RELEASE remote button again

SEE both LEDs flash Blue and go OFF

6) PRESS and RELEASE remote button a third time

Programming is complete. This remote button can now be used to operate door opener.
Repeat as necessary for other remotes or buttons on the same remote.